

## MAINTENANCE SCHEDULE FOR LAVINA G-X PROPANE MACHINES

8 HOURS/50 Hours: L30/L32/L38G-X	100 HOURS	150 HOURS	200 HOURS
<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain with a pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter. Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter *Replace air filter, pre-filter and the bonnet filter, spark plugs. Gap at 0.35. Replace all seals and V-rings check all pulleys, and sprockets replace if needed. Check the condition of all belts and bearings, replace if needed. Most importantly, inspect and clean the tooling heads, Replace buffers and black elastic disc, tighten all bolts. Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>
250 HOURS	300 HOURS	350 HOURS	400 HOURS
<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain with a pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter *Replace air filter, pre-filter and the bonnet filter, spark plugs. Gap at 0.35. Replace all seals and V-rings check all pulleys, and sprockets replace if needed. Check the condition of all belts and bearings, replace if needed. Most importantly, inspect and clean the tooling heads, Replace buffers and black elastic disc, tighten all bolts. Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>
450 HOURS	500 HOURS	550 HOURS	600 HOURS
<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain with a pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter Recommended Oil Change Interval Do not exceed the 50 hours interval. *Blow out air filter, pre-filter and the bonnet filter Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>	<p>*Change Oil (10W30) and Oil filter *Replace air filter, pre-filter and the bonnet filter, spark plugs. Gap at 0.35. Replace all seals and V-rings check all pulleys, and sprockets replace if needed. Check the condition of all belts and bearings, replace if needed. Most importantly, inspect and clean the tooling heads, Replace buffers and black elastic disc, tighten all bolts. Open the service cover at motor base to clean chain <b>with a</b> pressure washer. Lubricate the chain with chain lubricant Check the tension For sagging tighten if needed.</p>

**Manufacturer warranty: Superabrasive will cover the shipping charges** for part or the transportation of the machine to Superabrasive **within the first 200 operating hours** - Shipping charges, if covered by Superabrasive, must be agreed upon in advance and approved by Superabrasive.

**\*Your machine comes with 600 hours or 2 years, whichever comes first, manufacturer warranty.**

**\*Superabrasive Inc. reserves the right to decline any warranty claims if the maintenance schedule has not been performed.**

**Tech Support Line: 800-987-8403**