



## QUICK CHANGE 3-BUTTON TOOLS

The 3-Button tools are designed to level uneven floors and/or grind off old lacquer. Start with 50 grit, or 30 grit, if you need to remove thick lacquer.

X3B-BR-0030  
X3B-BR-0050

30 GRIT



50 GRIT



After removing the old finish, switch to electroplated pads.

## ELECTROPLATED PADS

Flexible electroplated pads with open diamonds for quick and efficient wood grinding. Offered in 7" and 9" sizes with velcro backing - attach to velcro plates.



7EL-50-FL-0050  
7EL-50-FL-0070  
7EL-50-FL-0120-SD

9EL-50-FL-0050  
9EL-50-FL-0070  
9EL-50-FL-0120-SD

50 GRIT

70 GRIT

120 GRIT

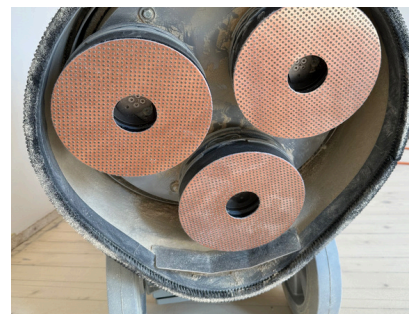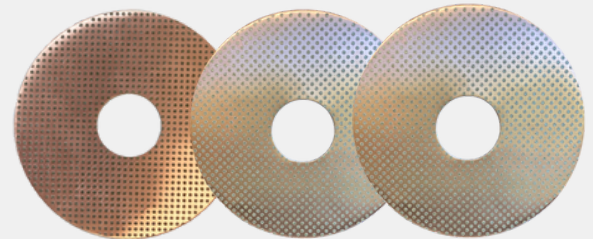

- Clean the floor thoroughly before starting to prevent scratching.
- Make sure the grinder shroud is all the way down on the floor, and connect the grinder to a vacuum.
- Grind at low speed to allow the tools work effectively, and check the scratch pattern periodically (wipe the floor with a wet cloth to see scratches better).
- After 120 electroplated pads, you can continue with finer grit sandpaper, if needed.