


BREAK NEW GROUND WITH LAVINA POWER TROWELS

LP36GE

powered by
KOHLER

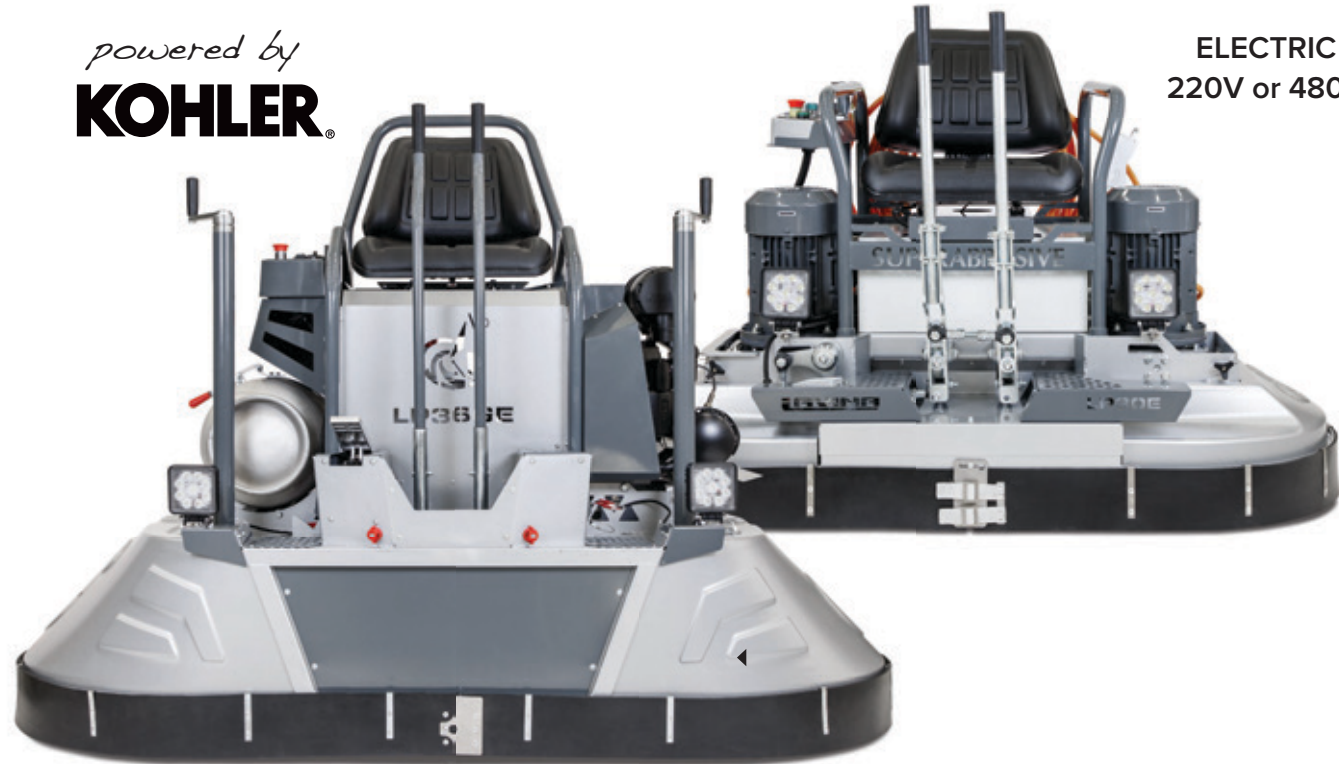


LP30E

ELECTRIC
220V or 480V

**NEW ELITE SERIES TROWELS READY TO GRIND AND POLISH
AT INCREDIBLE RATES.**

Equipped with floating pan system with free spinning tool holders, transportation wheel, manual crank lift system, heavy-duty shroud, and other user-friendly features.

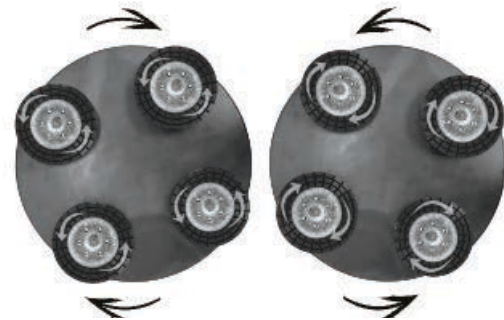

TROWEL SHINE

POWER TROWEL CONCRETE POLISHING SYSTEM

by  **SUPERABRASIVE**

ADAPT YOUR TROWEL
FOR POLISHING

IDEAL FOR LARGE
INDUSTRIAL PROJECTS

INCREDIBLY HIGH
PRODUCTIVITY

MINIMUM
START-UP COST



[superabrasive.com](https://www.superabrasive.com)

TROWEL SHINE SYSTEM


FREE SPINNING HEADS FOR OPTIMAL TOOL WEAR AND MACHINE BALANCE

FAST AND EASY TOOL CHANGES WITH LAVINA QUICK CHANGE TOOLS.

ENCAPSULATED BEARINGS - NO NEED FOR PERIODIC REGREASING.

QC MAGNETIC HEADS


13.2" / 335MM, #A80.00.00

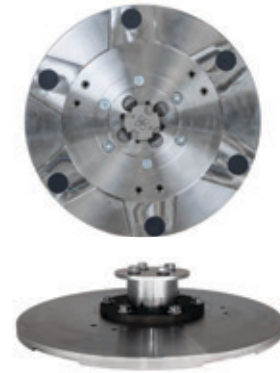


You can order ready to go trowel pans with installed Trowel Shine tool holders, or you can install the tool holders yourself on your trowel pans. We provide a drilling template with each tool holder. The number of tool holders should match the number of blades on your power trowel, and they should be installed symmetrically, with no tools sticking out.




POPULAR SET-UPS

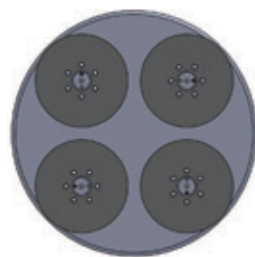

36" / 900MM
4 X 13.2" HEADS

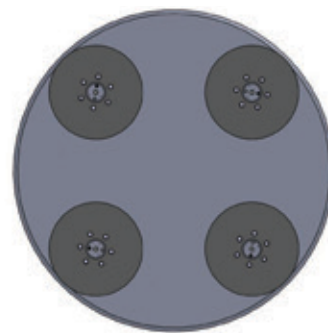

48" / 1200MM
4 X 13.2" HEADS

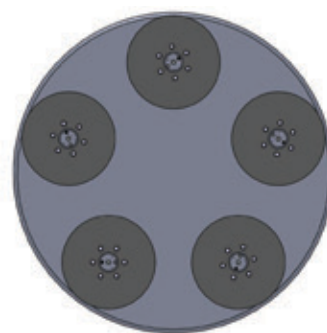

48" / 1200MM
5 X 13.2" HEADS

TROWEL SHINE TOOLING OPTIONS

Trowel grinding and polishing is done **WET** - a proper slurry management method should be used. Also, make sure you order tools suitable for wet applications.

GRINDING TOOLS

If grinding is necessary (damaged concrete, rain drop effect), start with SA- Superthick Metal Discs, Quick Change style, offered in 46, 70 and 120 grit. Don't forget to use the security plates to lock the Quick Change tooling in place - #A64.00.01 for metals and #A84.00.00 for 13" rings.

Follow with HD-Copper Rings 50 & 100 grit to remove scratches and transition to resins.

OR, you can use Waffel Rings 120 grit (wet bond) instead.

On flat floors / new construction, you can start with Waffels 50.


HONING & POLISHING TOOLS

Continue with Waffel Rings 200, 400, 800 grit (wet bond).

After 800 grit, you can switch to V-Harr Rings (dry), OR, SupraShine HP pads (dry). To attach SupraShine pads, you need pad holders #A87.00.00R.



SA METALS

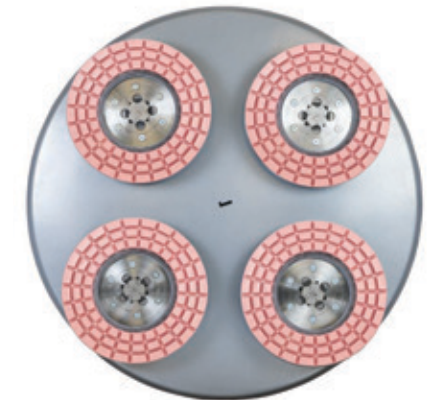

WAFFEL RINGS

