

## LAVINA GUIDE TO POLISHING OVERLAYS



### STEP 1

SA-0046MB  
Metal Discs



### STEP 2

SA-0070MB  
Metal Discs



### STEP 3

Calibra/Corsa  
50 Hybrid  
Ceramic



### STEP 4

Calibra/Corsa 100  
Hybrid Ceramic



### STEP 5

HD-Resin 200




### STEP 6

Nato 400



### STEP 7

Nato 800

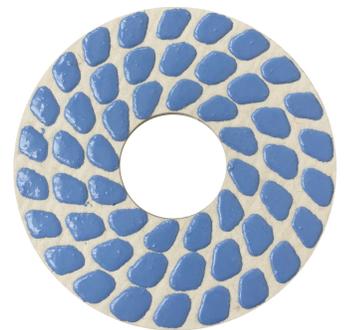

### STEP 8

V-Harr 1800

- ✓ Start within 12-24 hours after pour, as otherwise material becomes too hard.
- ✓ Densify after 200 grit.
- ✓ Optional polishing step - V-Harr 3500 grit.
- ✓ For best results, buff the floor with SupraShine 8000 pads (before and after applying guard).